

## HOW TO USE THE FIREPLACE

1. Open the glass door by sliding it upwards folding it to the side.



2. Stack the wood, about four blocks, with the smaller blocks on top of the big blocks.



3. Open the chimney completely by turning the slider all the way to the right (+)

4. Place some kindling and the firelighters under and between the logs.




5. Light the white firelighters with a match.



6. Close the glass door. If you notice that the fire is not burning properly, you can open the door an inch to stimulate the air supply.



7. The kindling and firelighters should now light up. The upper blocks of the wood (the smaller ones) must now also light up. The glass door must now be completely closed.

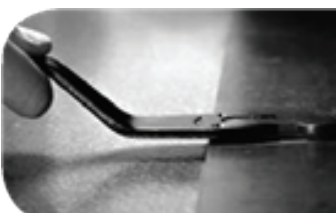

8. By moving the lever to the left (-), you can regulate the air supply and control the strength of the fire. If you notice that the fire is not burning as it should, move the lever to the right again (+)



9. Over time, the fireplace will start to glow and spread a pleasant warmth. As long as there is enough burning wood in the fireplace, you can add wood. Never more than 1 or 2 blocks at a time!



10. If you no longer wish to use the fireplace, leave it closed with the door. When the fire has completely cooled down, you can remove the ash and the fireplace is ready for use again. Note that the ash can often still be hot even though the fire has not been in use for several hours.

### **IMPORTANT:**

Never use in the fireplace:

1. Wet wood, leaves, twigs with resin (pine trees) or woody plants;
2. Processed wood (painted, stained or otherwise);
3. Paper, Cardboard or Cotton;
4. Artificial or foam materials;
5. Chipboard or other pressed wood species;
6. Flammable liquids (spirits, turpentine, Liquids with alcohol);
7. Diapers or other household waste.

**Note:** Due to the heat development of the fireplace, the glass door becomes extremely hot. Therefore, never leave children unattended near the fireplace.